



**11975 Portland Ave. S. Suite 104
Burnsville, MN 55337**

Phone: 952-894-6637

Fax: 952-894-0750

Email: info@ventaire.com

Website: www.ventaire.com

PRODUCT GUIDE FOR

Ventaire Model WB

Wall Box System

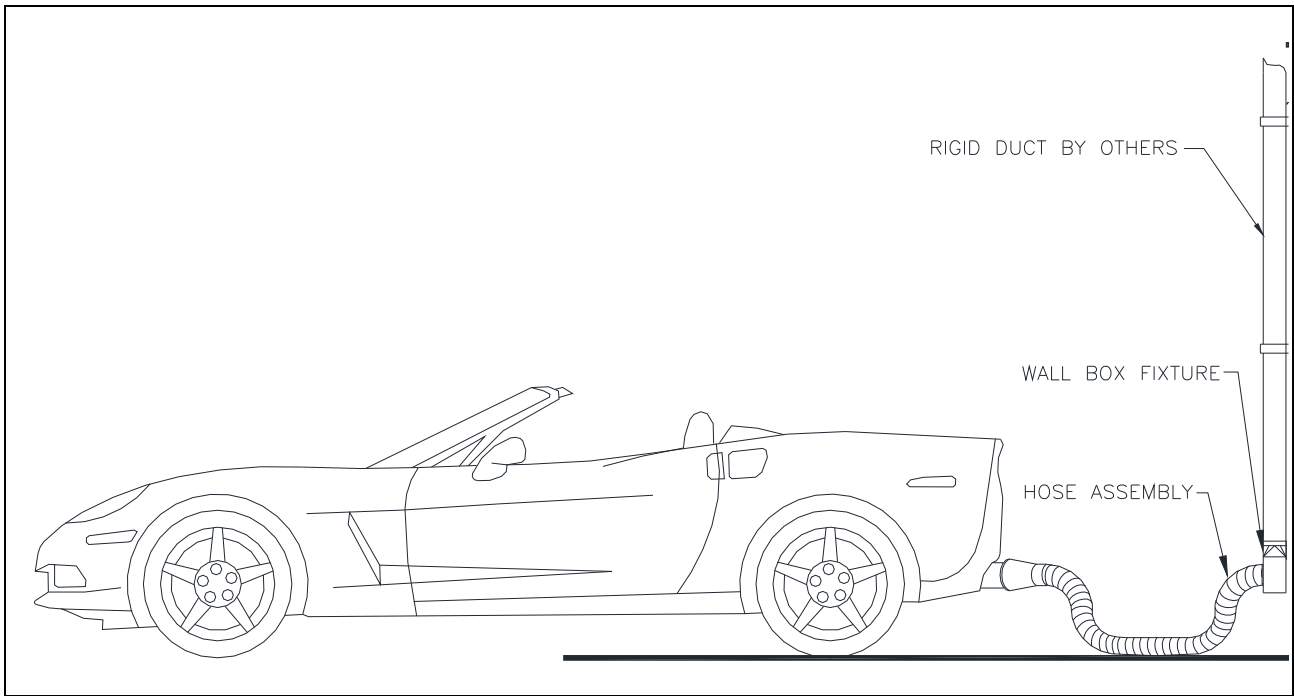


FIG 1-Typical System Layout

INTRODUCTION

1. Prior to installation inspect all the components received for shipping damage. If damage occurred contact your Ventaire representative for assistance.
2. Read **ALL** the instructions before proceeding with any installation, operation, or maintenance.

INSTALLATION

NOTE: The Wall Box Fixture is typically located near the floor similar to a central vacuum system so the hose does not have to bend sharply to reach the floor nor too low that the user has to reach all the way to the floor to plug in the hose assembly into the fixture. Reference FIG1.

1. Install the Wall Box Fixture and rigid duct between the fixture and the exhaust fan using Industry standard methods.

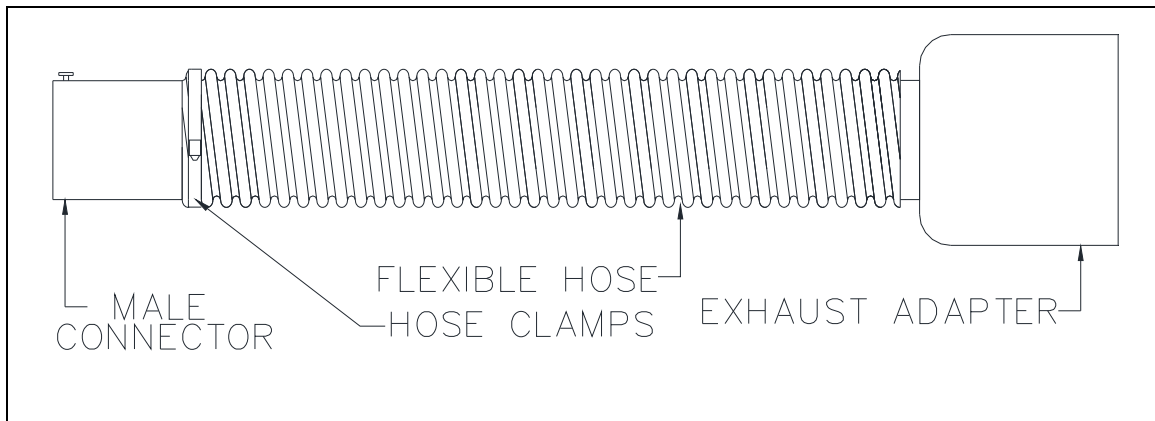


FIG2 – Hose Assembly

2. Attach the components of the hose assembly as shown in FIG 2.

OPERATION

Complete operation of the WB- Wall Box is simple and can be accomplished in the following steps:

CAUTION: The vehicle should not be running until the system is turned on & is attached to the vehicle's tailpipe.

1. Attach the exhaust adapter to the exhaust pipe of the vehicle.
2. Insert the male twist lock fitting into the female fitting located on the inlet of the Wall Box Fixture.
3. Open the slide gate completely and lock open by tightening the thumb screw on the blast gate.
4. Turn the exhaust fan on and check to see if the system is providing ample suction.

NOTE: Never put excess force on the flex to wall box connection by pulling or pushing the hose, this could cause severe damage to the wall box or latching connectors.

5. Turn on the vehicle.

WARNING: Exhaust Adapter and/or hose assembly may be hot while and after use. Be sure to let the system cool before handling.

6. After the exhaust procedure is completed and the vehicle is shut off, remove the adapter from the vehicle's tailpipe.

When the system is no longer required, simply:

7. Turn off exhaust fan.
8. Remove the tailpipe adapter from the vehicle.
9. Remove male connector from wall box fixture and slide blast gate sleeve shut.
10. Store tubing assemblies on wall hook (if applicable) or in other appropriate location.

MAINTENANCE

1. Routinely check the flexible hose for wear to ensure that proper airflow is obtained. If the holes in the hose are apparent, contact your Ventaire representative immediately.
2. Periodically check all the connections between the ductwork for leakage. Tighten or reseal if necessary.
3. For problems not covered in these instructions contact your representative.



11975 Portland Ave. S. Suite 104
Burnsville, MN 55337
Phone: (952) 894-6637
Fax: (952) 894-0750
Email: info@ventaire.com

12-MONTH WARRANTY

VENTAIRE warrants their products, to the original purchaser, to be free from defects in material and workmanship under normal use and service (except for those cases which buyer supplied materials are used) for a period of 12 months from the original date of shipment. During the warranty period, **VENTAIRE**, will at its option, repair, replace, or issue credit for any components that are deemed defective by **VENTAIRE**.

Buyer's failure to pay the full amount due within (60) days of invoice shall release seller from any and all liability or obligation to any warranty.

Before returning equipment for repair or replacement, a **Return Authorization Number** must be obtained from **VENTAIRE** (952-894-6637.) The **Return Authorization Number** must be written on the outside of all shipping cartons. Items returned without a **Return Authorization Number** will be refused. Items returned should be in original condition in which it was received and must be accompanied with a written explanation of the reason(s) for their return.

This warranty does not cover damage caused by accident, misuse, misapplication, or unauthorized service modification.